

SORAN™

 
GO RIG II

Combined  
Multi-effects  
Stompbox

组合式效果器

Owner's Manual

用户手册

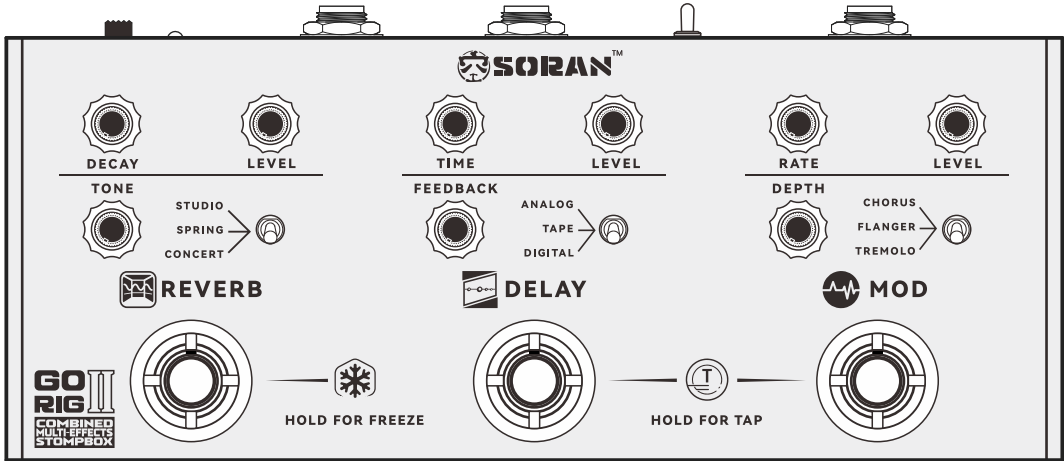

WARNING!  
IMPORTANT SAFETY INSTRUCTIONS

READ THESE INSTRUCTIONS BEFORE CONNECTING.  
KEEP THEM FOR FUTURE REFERENCE.

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

To reduce the risk of fire or electric shock, do not remove screws or covers. No user-serviceable parts inside. Refer servicing to qualified service personnel only.

FCC COMPLIANCE STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.This device may not cause harmful interference. 2.This device must accept any interference received, including interference that may cause undesired operation.

SYMBOL DEFINITIONS:



**Lightning Bolt Symbol:** Indicates the presence of high voltage. Handling this device improperly may cause electrical shock.



**Exclamation Point Symbol:** Alerts the user to important operating and maintenance instructions.

SAFETY INSTRUCTIONS:

- **Power Supply:** Use only the provided power supply or power cord. If unsure about the power type available, consult your dealer or local power company.
- **Placement & Heat Sources:** Do not place the device near heat sources such as radiators, heat registers, or other devices that generate heat.
- **Object & Liquid Entry:** Prevent objects or liquids from entering the enclosure to avoid damage or electrical shock.

● **Servicing: Do not attempt to repair or modify this product yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.**

● **Conditions Requiring Service:**

- Servicing is required if:
- The power cord or plug is damaged.
  - Liquid has been spilled or objects have fallen into the device.
  - The device has been exposed to rain or moisture.
  - The device does not operate normally.
  - The device has been dropped or damaged in any way.

- **Unplugging:** Disconnect the power supply if the device will be unused for long periods of time.

- **Power Cord Protection:** Ensure the power cord is not stepped on, pinched, or damaged, particularly at plugs, convenience receptacles, and where it exits from the device.

- **Hearing Protection:** Listening at high volume levels for prolonged periods may cause permanent hearing loss. Always practice safe listening.

NOTICE: Follow all instructions and heed all warnings.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

OVERVIEW

Soran Go Rig II is a compact digital multi-effects stompbox that combines essential ambient effects—MODULATION, DELAY, and REVERB—into one streamlined unit. Designed for guitarists who prioritize simplicity, portability, and great tone, Go Rig II delivers all the must-have ambient effects to perfectly complement your favorite drive or amp-style pedals. Whether you're rehearsing, performing, or just practicing at home, Go Rig II has everything you need in a grab-and-go form factor.

The MOD module features 3 classic effects: Chorus, Flanger, and Tremolo. It also supports Tap Tempo, allowing you to easily sync modulation speed with your playing.

The Delay module includes 3 essential delay types: Analog Delay, Tape Echo, and Digital Delay. With Tap Tempo support, adjusting the delay time to fit your music's tempo is quick and intuitive.

The Reverb module offers 3 studio-grade reverbs: Studio Reverb, Spring Reverb, and Concert Reverb. In addition, the module features a Freeze function for ambient soundscapes and creative reverb effects.

Go Rig II supports a Tempo Sync feature. When enabled, the Rate (MOD) and Time (DELAY) parameters are linked and stay perfectly synchronized—ensuring your effects lock in with the groove of your music. With Tap Tempo function, you only need to tap one module's tempo to set the timing for both MOD and DELAY, making real-time adjustments easy and efficient.

 
Go Rig II supports stereo output, and with its built-in lithium battery, you can play anywhere—no external power required. The battery provides over 5 hours of continuous playtime on a single charge, and the USB-C port ensures convenient and fast recharging. Housed in a durable full-metal enclosure, Go Rig II is built to withstand the demands of stage and studio use. With an intuitive, "what you see is what you get" interface, users can get started in seconds.

Just plug in your guitar, connect your favorite drive pedal and amp, and you're ready to go. From home practice to stage performances, Go Rig II fits right into your gig bag—powering your tone anytime, anywhere.

FEATURES


- Combines modulation, delay, and reverb in one compact unit—perfectly complementing your favorite drive or amp pedal.
- Includes 3 modulation types with Tap Tempo, allowing easy syncing of modulation speed to your playing.
- Features 3 delay types with Tap Tempo for quick tempo-synced delay adjustments.
- Offers 3 reverb types plus Freeze function for ambient and layered effects.
- Tempo Sync links modulation rate and delay time, synchronizing both effects seamlessly.
- Supports stereo output for wide, immersive sound.
- Equipped with built-in lithium battery providing over 5 hours playtime and fast USB-C charging.
- Rugged full-metal housing designed for durability on stage and in the studio.
- Intuitive, menu-free interface for immediate, easy operation.
- Portable design fits easily into gig bags for on-the-go playing.

CONTROL PANEL

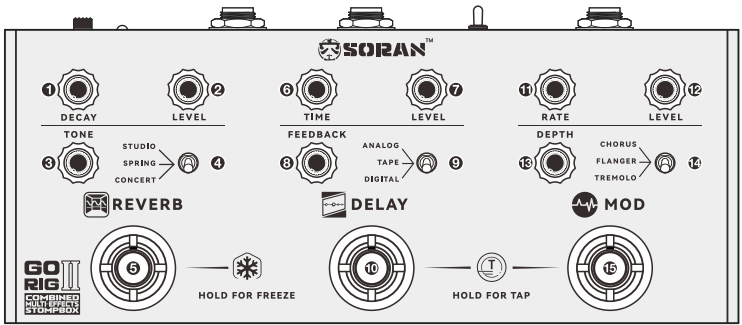


<b>1 Decay</b>	Sets the reverb decay time.	<b>6 Time</b>	Adjusts the time of the delay. (20~1000ms)
<b>2 Level</b>	Adjusts the level of the reverb.	<b>7 Level</b>	Adjusts the volume of the delay repeats.
<b>3 Tone</b>	Adjusts the brightness of the reverb.	<b>8 Feedback</b>	Adjusts the number of delay repeats.
<b>4 Reverb Type Selector</b>	Selects reverb type included Studio, Spring, or Concert.	<b>9 Delay Type Selector</b>	Selects delay type included Analog, Tape, or Digital.
<b>5 Footswitch</b>	Turns the reverb effect on or off. The LED lights white when Reverb is ON. Press and hold to activate the Reverb Freeze function—the LED turns red. Release to exit Freeze mode.	<b>10 Footswitch</b>	Turns the delay effect on or off. Lights white when the Delay effect is on. Press and hold for 1.5 seconds to enter Tap Tempo mode, Lights turns red. Exits Tap Tempo mode automatically after 3 seconds of inactivity.

<b>11 Rate</b>	Adjusts the rate of the modulation effect.	<b>13 Depth</b>	Adjusts the depth of the modulation effect.
<b>12 Level</b>	Adjusts the output volume of the modulation effect.	<b>14 Mod Type Selector</b>	Selects mod type included Chorus, Flanger or Tremolo.
<b>15 Footswitch</b>	Turns the mod effect on or off. Lights white when the mod effect is on. Press and hold for 1.5 seconds to enter Tap Tempo mode, Lights turns red. Exits Tap Tempo mode automatically after 3 seconds of inactivity.		

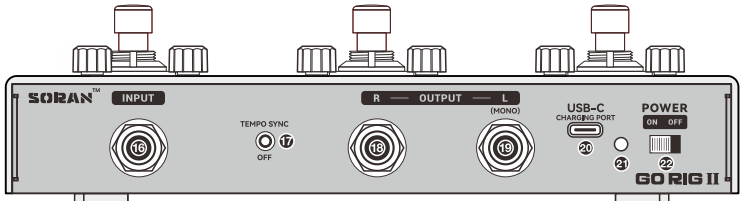 

<b>16 Input</b>	1/4" TS mono jack for connecting your guitar or other pedals.	<b>16 Output L</b>	1/4" TS mono jack for connecting to amplifiers or other pedals, outputting the left channel in a mono or stereo setup.
<b>17 Tempo Sync</b>	Controls the Tempo Sync function on/off. When Tempo Sync is on, a global tempo is activated—MOD rate and DELAY time are linked. Adjusting one will change the other, and Tap Tempo applies to both. When Tempo Sync is off, MOD and DELAY have independent tempos.	<b>20 USB-C</b>	USB Type-C jack for charging the built-in battery, DC 5V.
<b>18 Output R</b>	1/4" TS mono jack for connecting to amplifiers or other pedals, outputting the right channel in a mono or stereo setup.	<b>21 Power LED</b>	Indicates the current battery status.
		<b>Status</b>	<b>LED</b>
		Power on	Battery > 25% Green
		Power on	Battery < 25% Flashing green
		Charging	Battery < 100% Red
Charging	Battery full Green		
<b>22 Power</b>	Turns the unit ON/OFF.		

 CONNECTION

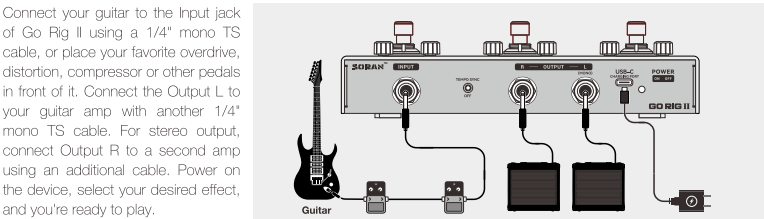

When the battery is low (indicated by the power LED flashing green), use a USB-C to USB-A cable to connect the Go Rig I to a USB power adapter. Once fully charged, the LED will turn green.

SPECIFICATIONS

<b>Sampling Frequency</b>	: 44.1kHz	<b>Input Impedance</b>	: 1MΩ
<b>AD converter</b>	: 24bit	<b>Output</b>	: 1/4" TS Output L, 1/4" TS Output R
<b>Signal Processing</b>	: 24bit	<b>Output Impedance</b>	: 10kΩ
<b>Frequency response</b>	: 20Hz-20kHz	<b>Power</b>	: Built-in 500mAh Li-ion battery, DC 5V USB charging via USB-C
<b>Noise Level</b>	: -98.7dBu	<b>Dimensions</b>	: 200mm(L) x 86mm(W) x 54mm(H)
<b>Dynamic Range</b>	: 96.5dB	<b>Weight</b>	: 535g
<b>Power Consumption</b>	: 85mA		
<b>Input</b>	: 1/4" TS Input		

ACCESSORIES

- User manual
- USB-C to USB-A Cable

\*Specification may change without notice.



Made in China